



Heat Seal Machine Operation Safety

Pressure Adjustments:

If staff are finding the heat press is hard to press down and hard to release, the pressure is too high!! To adjust the pressure, turn the cog to the left (counter-clockwise) and this will reduce the pressure making it easier to operate. The heat press should only require a small click into place and should not require force. If the machine begins to feel too loose, simply rotate the cog to the right (clockwise) and it will increase the pressure again (if the machine is too loose, you will notice the labels will not adhere correctly).



Avoiding Burns!!!

To avoid burning yourself on the heat press, make sure you follow these steps when applying the heat seal labels

1. Set the garment in place (The label is NOT sticky, so you must put the garment in place first)
2. Once you are happy with the garment placement, simply place the heat seal label on the garment. Again, the label is not sticky, so it is a simple placement of the label.
3. Once the label is in place, keep your hands clear from the press and heat seal the label.



Heat Seal Machine Operation Safety

General Safety

1. DO NOT TOUCH THE HOT PLATE. Even if the machine is off, it may have been on previously and will still be hot as it takes time to cool. If you are wanting to check the temperature of the hot plate, it will tell you on the screen once turned on. You should never check the temperature with your hands.
2. Do not leave the machine on and unattended.
3. When heat pressing, do not walk away from the machine whilst it is pressing a label on a garment.
4. Always turn the machine off after use.
5. Where possible, it is best practice to clamp the machine to the bench to avoid the potential for knocking the machine over.
6. DO NOT TOUCH THE PART OF THE GARMENT OR HEAT SEAL LABEL THAT WAS UNDER THE PRESS IMMEDIATELY AFTER PRESSING. When removing the garment from the press, be careful to avoid the heated garment and label for 5-10 seconds whilst it cools. Simply set it to the side and allow it to cool.

Please contact staff at Newfound Distributors for any questions or assistance on operation of the Heat Press. Our office hours are 8am-5pm Monday to Friday and our number is (07) 3821 2363.